



L
N
GND

INSTALLER SUPPLIED
LINE VOLTAGE
(90-240 VAC, 50-60 HZ)

RELAYS OPERATE IN A
"FAIL SAFE" CONFIGURATION.

To enable Strobe only, connect the yellow wire and the black wire. To enable Horn only, connect the red wire and the black wire.

Strobe & Horn operate together

Strobe & Horn operate independently

FCS WITH OPTION -2AI TO REMOTE AST-IS6 (CO₂) AND LPT-TCO (CO) ANALOG TRANSMITTER AND REMOTE RLY-4 WITH RSH-24VDC CONNECTION TO RELAYS WIRING CONNECTION DRAWING
REV-A April 24, 2017