



RELAYS OPERATE IN A "FAIL SAFE" CONFIGURATION.

To enable Strobe only, connect the yellow wire and the black wire. To enable Horn only, connect the red wire and the black wire.

FCS WITH OPTION -2AI TO REMOTE AST-IS6 (CO2) AND LPT-TCO (CO) ANALOG TRANSMITTER AND REMOTE RLY-8 WITH RSH-24VDC CONNECTION TO RELAYS WIRING CONNECTION DRAWING
REV-A February 20, 2017