

QCC Quad Channel Controller Menu Passcodes

CODE	NAME	DESCRIPTION
0001	Test Mode	<ul style="list-style-type: none"> • Test Relays • Test Strobe • Test Audible Alarm • View Priorities
1001	Basic	<ul style="list-style-type: none"> • Set Display Contrast • Set Clock * • Data Logging Program Sample Rate * • Modbus Setup <ul style="list-style-type: none"> • Remote Modbus ID • Remote Baud (WAN) • Local Baud (LAN) • Set Number of Remote Devices
1014	Display	<ul style="list-style-type: none"> • On Alarm • Splash Screen
2012	Alarms	<ul style="list-style-type: none"> • Program Channels <ul style="list-style-type: none"> • Set Channel Alarms • Enable/Disable Channels • Override Channels • Program Relays, Strobe and Audible <ul style="list-style-type: none"> • Enable/Disable Relay, Strobe and Audible • Override Relay, Strobe and Audible • Relay ON/OFF Delays • Strobe and Audible ON/OFF Delays • Program STEL and TWA <ul style="list-style-type: none"> • Set STEL, TWA and IDLH Alarms • Enable/Disable STEL and TWA Display

* available only if the Analog Output (Option -AO) is installed

CODE	NAME	DESCRIPTION
3022	Configure	<ul style="list-style-type: none"> • Channel Hardware <ul style="list-style-type: none"> • Enable/Disable Channels • Set Communication Type (Analog or Digital) • Set Channel ID Number • Set Channel Sensor Number • Channel Config <ul style="list-style-type: none"> • Set Name of Channel • Specify Units of Measure and Decimal Places • Set Value for Zero and Range • Logic and Priority Settings <ul style="list-style-type: none"> • Set Channel Logic • Set Relay, Strobe and Audible Logic • Set Priority Logic • Disable Priority Settings • Override Priority Settings
3032	Analog	<ul style="list-style-type: none"> • Analog Input Calibration • Analog Output Calibration • Analog Output Logic
2044	Save	<ul style="list-style-type: none"> • Save the current configuration
4044	Restore	<ul style="list-style-type: none"> • Restore the saved configuration