

cps[®]

COMPUTE-A-CHARGE[®]

CC220EW

Enhanced, Wireless Refrigerant Charging Scale



CPS Link™



Download on the
App Store

OWNER'S MANUAL (English)

Latest updates: www.cpsproducts.com

TO BE OPERATED BY QUALIFIED PERSONNEL ONLY



GET IT ON
Google Play

Version 4.3 or higher

Patented cps[®] link[™] Wireless Technology



ICES-003

Patent #9,043,161

CONTENTS

GENERAL SAFETY INSTRUCTIONS	4
OVERVIEW	5
KEY FEATURES	5
ADDITIONAL FEATURES IF PAIRED TO A MOBILE DEVICE	5
LCD DISPLAY FUNCTIONS	5
ABBREVIATIONS THAT APPEAR ON SCALE CORDED CONTROL DISPLAY	6
7 BUTTON KEYPAD FUNCTIONS	6
SCALE SPECIFICATIONS	7
QUICK START INSTRUCTIONS (Scale)	8
MANUAL WEIGH (Scale)	8
PROGRAMMABLE CHARGE (Scale)	8
PROGRAMMABLE RECOVER (Scale)	9
QUICK START INSTRUCTIONS (Scale + Mobile Device)	10
HOSE & EQUIPMENT CONNECTION DIAGRAMS	11
SCREEN LAYOUTS (Mobile Device)	12
SETTINGS SCREEN	12
JOB INFO & TEST LOG SCREEN	13
TOOLS SCREEN	13
PROGRAMMABLE CHARGE (Scale + Mobile Device)	14
PROGRAMMABLE RECOVER (Scale + Mobile Device)	15
TANK TRACKER™ (Featured Within The CPS Link App)	16
SETUP NEW SUPPLY TANK	17
SETUP NEW RECOVERY TANK	17
PROGRAMMABLE CHARGE	18
PROGRAMMABLE RECOVER	19
AUTOMATIC OPERATION (SVW + Scale + CPS Link App)	20
APPENDIX A (SCALE BATTERY LEVEL, CONNECTIVITY)	20
APPENDIX B (LCD BATTERY LEVEL INDICATOR)	20
APPENDIX C (DECLARATION OF CONFORMITY)	20
APPENDIX D (CERTIFICATE OF CALIBRATION COMPLIANCE)	21
WARRANTY	21
CPS LOCATIONS	21

GENERAL SAFETY INSTRUCTIONS

Please read, follow and understand the contents of this entire manual, with special attention given to **Danger**, **Warning** and **Caution** statements.

FOR USE BY PROFESSIONALLY TRAINED AND CERTIFIED OPERATORS ONLY. MOST STATES, COUNTRIES, ETC., MAY REQUIRE USER TO BE LICENSED. PLEASE CHECK WITH YOUR LOCAL GOVERNMENT AGENCY.

- DANGER:** Overfilling a recovery tank may cause a violent rupture resulting in severe injury or even death. **As a minimum, please use a scale to continuously monitor recovery tank weight.**
- WARNING:** All hoses may contain liquid refrigerant under pressure. Contact with refrigerant may cause frostbite or other related injuries. Wear proper personal protective equipment such as safety goggles and gloves. When disconnecting any hose, please use extreme caution as high pressure refrigerant may be present.
- WARNING:** Avoid breathing refrigerant vapors and lubricant vapor or mist. Breathing high concentration levels may cause heart arrhythmia, loss of consciousness, or even cause suffocation. Exposure may irritate eyes, nose, throat and skin. Please read manufacturer's Material Safety Data Sheet for further safety information on refrigerants and lubricants.
- WARNING:** Make certain all safety devices are functioning properly before operating equipment.
- CAUTION:** To avoid cross contamination of refrigerant and potential leakage to the atmosphere, proper hoses and fittings should be used and checked for damage.
- CAUTION:** To avoid overfilling refrigerant tank, read and follow manufacturer's recommended filling instructions for refrigerant being recovered and constantly monitor the scale display.
- CAUTION:** Mixing of different refrigerants will cause your recovered supply of refrigerant to become contaminated.
- CAUTION:** The user must monitor the scale display and turn ON/OFF manifold and/or tank valves at appropriate times so that the proper amount of refrigerant is recovered (into the tank) or removed (from the tank)



OVERVIEW

The Compute-A-Charge CC220EW is a battery operated, precision scale for weighing, charging and recovering refrigerants used in HVAC/R systems. This scale may be operated in a MANUAL or PROGRAMMABLE mode (or AUTOMATIC -if paired with the SVW Wireless Solenoid Valve-purchased separately).

For additional functionality, the CC220EW can be paired to a mobile device running the CPS Link app which allows technicians to conveniently store and access Job and Customer Data. Logs (records) of refrigerant use (Tank Tracker) can also be stored and sent to the home office or others.

KEY FEATURES

- **Weight Capacity** - 220 lb (100 kg)
- **Weight Accuracy** - 0.015% of reading [or +/- selected display resolution, whichever greater]
- **Display Resolution (Selectable)** - User can select from 4 different increments (see specifications)
- **Various Modes Of Operation**- Run in Manual or Programmable Mode (or pair to the CPS Wireless Solenoid Valves for Automatic operation)
- **Continuous Battery Life** - One 9V = 50 hours; Two 9V (included) = 100 hours
- **7 Button Keypad** - Easy to navigate
- **Audible & Visual Charge / Recover Alarms** - Alerts when approaching *programmed charge amount* or *overflow limit*
- **Auto-Power Off (APO)** - To conserve battery power, and when not in use, the scale can be set to turn OFF after any of 5 different time increments (see specifications)
- **Smart Awake Feature** - Displays weight at time of Auto-Off

ADDITIONAL FEATURES IF PAIRED TO A MOBILE DEVICE


- Key controlling functions and readouts conveniently located on your mobile device
- Store Job Data- Work order, invoice number, customer, log of refrigerant use
- Create And Store Customer Data- Name, address, e-mail, phone, notes
- Test Logs- Measurements, results of tests associated with services performed
- Export- E-mail specific files to customer or home office
- Tank Tracker™ -Convenient refrigerant tank management system for tracking refrigerant used on jobsites (for Supply & Recovery tanks and refrigerant type in each tank), plus time, date and geotag location where used
- Operates in ISM band for international use

LCD DISPLAY FUNCTIONS

Indicates in Charge or Recover mode

Battery level indicator (3 segments). See Appendix

Indicates scale has wireless connection with either a mobile device, or SVW Wireless Solenoid Valve

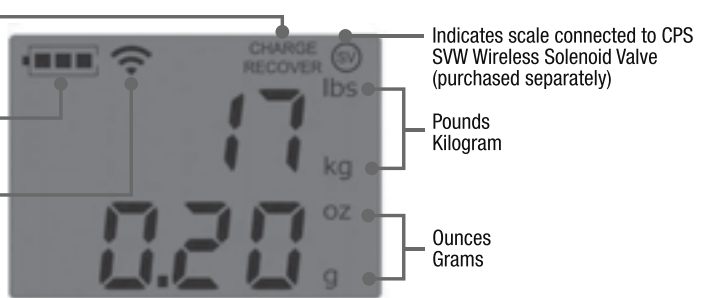

Display Screen On Corded Control

ABBREVIATIONS THAT APPEAR ON CORDED CONTROL DISPLAY



Selectable Modes	SCL = Scale (Weigh)	CHG = Charge	rEC = Recover	rES = Resolution	APO = Automatic Power OFF	SOL = Solenoid (SVW-Purchased Separately)
Charge Mode	c = Charge (tracking) in process	F = Final programmed charge achieved				
Recover Mode	t OFF: Ensure tank NOT on scale	t ON: Place tank ON scale	r = Recovery (tracking) in process	o = Tank overfilled	n = Net gain of one or more tanks	
Charge or Recover	h = Hold (pause) refrigerant tracking				Err = Scale Malfunction	
All Modes	OL = Overload (Reduce load immediately)					

7 BUTTON KEYPAD (FUNCTIONS)

GO/HOLD KEY

- Starts CHARGE or RECOVER modes (per data entered after pressing the Set key).
- While running in CHARGE or RECOVER modes, pressing this key will place the CC220EW into HOLD (pause).

POWER KEY

- Press to turn power ON or OFF.

SET/RESET KEY

- There are 6 modes to select and/or where information can be entered: Scale (Weigh), Charge, Recover, APO, Resolution, Solenoid
- Press to scroll through different modes.
 - Press while in any mode to terminate and return to SCALE mode.

UP KEY

- Increases the weight displayed (one resolution unit) for every actuation, or if continuously pressed.

DOWN KEY


- Decreases the weight displayed (one resolution unit) for every actuation, or if continuously pressed. *A reminder will flash if the display reaches 0.*

TARE KEY

- While in WEIGH mode - Press to Tare ("zero out") the scale display.
- While in HOLD mode - Tare function is not active.
- While in CHARGE/RECOVER mode -Resets programmed amount to 0.

UNITS KEY

- Press to select your desired weight unit (LB to KG, or KG to LB).

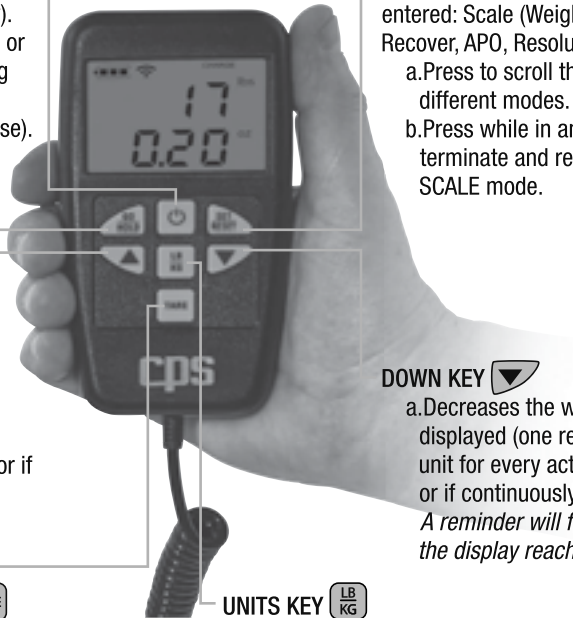






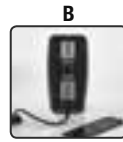
SCALE SPECIFICATIONS

Maximum Load:	220 lb (100 kg)
Weight Accuracy:	0.015% of reading or +/- selected resolution, whichever greater
Display Resolution (Increments):	Selectable: 0.1 oz (2 g); 0.2 oz (5 g); 0.25 oz (10 g); or 0.50 (25 g)
Battery Life:	One 9V = 50 hrs.; Two 9V = 100 hrs.
Power Source:	One or two (included) 9V Alkaline batteries.
Battery Status Indicator:	3 segment symbol
Control Type:	Handheld LCD display (or wirelessly using CPS Link app and mobile device)
Control Mount:	Magnetic back, with 360° swivel hook
Cord:	6' (1.8 m) flexcord, extended
Auto Power Off (Enabled):	Default = Display Turns OFF After 10 minutes inactivity (Can re-set in increments of 5, 10, 15, 30, 60 mins or OFF)
Auto Power Off (Disabled):	Display shows "APO OFF" at power up [Display will be constant ON]
Smart Awake:	Displays last weight measurement at time of Auto-off, updated to current value
Weight Readout:	lb. / oz. or kg / g
Operating Temperature Range:	14°F to 122°F (-10°C to 50°C)
Scale to mobile device range:	150 ft. (45.7 m) Unobstructed
Operating Humidity Range:	0 to 95% non-condensing
Overload Protection:	Mechanical and visual
Unit Weight (Including Case):	5.62 lb (2.55 kg)
Platform Dimensions:	8.75" x 8.75" (22.3 x 22.3 cm)
Calibration:	National Institute of Standards & Technology (U.S.)
Approvals	FCC, IC, CE
Serial # / Radio I.D. #	See label on scale underside
Warranty:	1 year

QUICK START INSTRUCTIONS (Scale)



- A. Remove scale from storage case and place on level, rigid surface.
- B. Install one or two (included) 9V batteries in back of control.
- C. If desired, attach swivel hook to rear of control housing.
- D. Press power  to turn scale ON.
- E. APO (Automatic Power Off). 5 minutes = default setting [you may also select 10, 15, 30, 60 mins, or turn APO OFF]. Press  until APO appears on display. Then use   until desired APO time is found. Then press  to select desired time.
- F. DISPLAY RESOLUTION: Default setting is 0.2 Oz (5g).
 - a. To select a different resolution, press SET/RESET until "rES" appears on display.
 - b. Press Up/Down arrows until new desired value found (Oz: .1, .2, .25, .50; or Grams: 2, 5, 10, 25)
 - c. Press SET/RESET to select value.
- G. WEIGHT UNITS: To select Imperial (Lb & Oz) or Metric (Kg & G) units, press the LB/KB key to toggle to your desired value.
- H. You are now ready to use the Weigh, Charge or Recover functions.



B
Runs on one 9V battery (or 2 included)



C
360° Swivel hook with magnetic back

MANUAL WEIGH (Scale)



1. Place refrigerant tank on scale
2. Default mode is "SCL" (weigh).
3. View GROSS weight on display.
4. Remove tank from platform after weight observed.
5. Display will flash if maximum weight capacity (220 Lb/100 kg) exceeded.

PROGRAMMABLE CHARGE (Scale)









1. Place refrigerant tank on scale
2. Connect equipment per DIAGRAM A (CHARGE).
3. Press  to scroll through the menu and choose CHARGE "CH9".
4. Use   to input desired weight (charge amount), then press . (Figure C-4)
5. Once tank and manifold valves are opened, the charge (tracking) session will begin. The display will show a small "c" indicating "charge" and how much refrigerant has been charged into your system (removed from the refrigerant tank).
6. During charging, screen characters will eventually flash at an increasing rate, showing that the programmed charge amount is closer to being reached.
 - HOLD - Pressing  while charging will **PAUSE** charge *tracking*, allowing the user tighten hoses, change tanks if necessary, but continue later without losing track of the NET amount charged.
 - SET/RESET - Pressing  during charge operation will stop/cancel the charge from being *tracked*. The normal WEIGH Mode will resume.

DIAGRAM A (CHARGE)


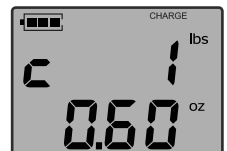


Fig. C-4
(Example Weight Shown)

PROGRAMMABLE CHARGE (Scale)

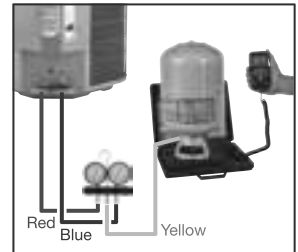

- **NOTE:** So that the *actual charged* vs. tracked amounts align, remember to physically stop charging by closing tank and/or manifold valves before pressing HOLD.
 - GO/HOLD - After any adjustments are made, the accumulated amount being tracked can be resumed by pressing
7. When programmed charge amount (weight) has been reached, the screen will flash a large “F” (FINAL) (Figure C-7) and the control will “beep”. Quickly close tank and/or manifold valves.

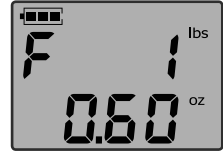


Fig. C-7
(Example Weight Shown)


8. Press to end session.
9. **SHUT DOWN** - When CHARGE function done, turn off recovery machine, close valves, remove cylinder from platform. Press to turn scale OFF.



PROGRAMMABLE RECOVER (Scale)

1. Connect equipment per DIAGRAM B (RECOVER) but **DO NOT PLACE TANK ON SCALE AT THIS TIME**

DIAGRAM B (RECOVER)

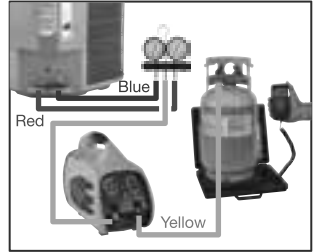

2. Press to scroll through menu and choose Recover “rEC”.
3. For tank you will use, press to input a combined Tank Weight & Water Capacity Weight both stamped individually on the tank collar (but use TW + 0.8 X WC for final value to enter), then press .
- WC = Water Capacity (weight);
 - TW = Tank Weight (of empty tank)

4. TANK OFF

When “t OFF” appears (See Figure R-6) ensure tank is NOT on scale, press .



Fig. R-6

CAUTION: DO NOT PLACE TANK ON PLATFORM BEFORE STEP 5. DOING SO COULD LEAD TO OVERFILLING THE REFRIGERANT TANK. DANGER - THE RECOVERY TANK CONTAINS LIQUID REFRIGERANT. OVERFILLING OF THE RECOVERY TANK MAY CAUSE A VIOLENT EXPLOSION RESULTING IN SEVERE INJURY OR EVEN DEATH.

5. TANK ON

When “t ON” (Figure R-7) appears, place tank on scale, press , open valves and turn ON Recovery Machine (follow manufacturer’s instructions) to start recovery.



Fig. R-7

6. REMAINING CAPACITY OF TANK

Display will show “r” (Figure R-8) indicating recovery in process, alongside the remaining tank refrigerant weight capacity (until full). Display will count backwards from remaining tank capacity (indicating decreasing capacity of tank) **CAUTION: OVERFILLING RECOVERY TANK MAY RESULT IN SERIOUS INJURY**



Fig. R-8
(Example Weight Shown)

PROGRAMMABLE RECOVER (Scale)





7. TANK FILL LIMIT REACHED (OR EXCEEDED)


While recovering refrigerant, be ready to turn OFF recovery machine and/or CLOSE valves, while constantly monitoring the display so that the tank will NOT be overfilled. Characters will flash if tank overflow has occurred and a “negative” symbol will appear next to the “o” symbol, (Figure R-9) indicating the tank has been overfilled by the amount indicated on the display.



Fig. R-9
(Example Weight Shown)

7.1 If characters flash, the user may press  once to stop the flashing. Turn OFF recovery machine and/or CLOSE valves. The user may change tanks then press  again to restart recovery tracking.

8. HOLD FUNCTION

At any point during recovery, pressing  will activate the HOLD function. During HOLD indicated by “h” (Figure R-10), the remaining tank capacity will update if the weight is changed, but the net gain will not account for any additional recovery during hold.

NOTE: Remember to physically stop recovering refrigerant by closing tank and/or manifold valves while activating HOLD.



Fig. R-10
(Example Weight Shown)

9. NET GAIN





At any point during refrigerant recovery, pressing and holding  will show the net gain indicated by “n” (Figure R-11) The recovery feature will track the net gain during the recovery session (except during Hold), including even after overflow is reached, so that the exact total net gain will be known.





Fig. R-11
(Example Weight Shown)

10. IF RECOVERING REFRIGERANT INTO MORE THAN ONE TANK

If recovering refrigerant into more than one tank, of the same capacity, without reaching overflow, press  during recovery, turn off recovery machine and close valves. Then change the tank, then press  again to restart recovery tracking.

10.1 The NET Gain will continue to track the recovery of this session, until  is pressed.

11. **SHUT DOWN** - When RECOVER function complete, close valves, turn OFF recovery machine (follow manufacturer’s instructions) and remove tank from scale then press  to end session or press  until display turns off.

QUICK START INSTRUCTIONS (Scale + CPS Link App)



1. Review and adhere to all safety instructions.
2. Remove scale from case and place on a level, rigid surface.



For iOS devices - Download the free CPS Link™ app from the App Store.


For Android devices (version 4.3 or higher) - Download the free CPS Link™ app from **Google Play**.

Note: Earlier versions of Android software do not use 'low energy' communication device necessary to install and run the app.



QUICK START INSTRUCTIONS (Scale + CPS Link App)



3. Remove battery door on back of hand control and install 1 or 2 (included) 9V batteries.
4. Replace battery door.
5. Press  to turn scale ON.
6. Scan the appropriate QR code from this front cover or download and install the free CPS Link™ app on your mobile device
7. On your mobile device, open the CPS Link app. Select DEVICE LIST screen (above) which will show and scan for CPS wireless devices in range.
8. If there are multiple CPS wireless scales in range, select **ONE** (see label on scale base for serial/ radio I.D. number) device from the screen on your mobile device.
9. Connect equipment as shown in **Diagram A** or **Diagram B**. If you don't intend to use the Tank Tracker™ (tank management feature), you are ready to use the Compute-A-Charge scale. To use Tank Tracker™, see page 16-17 for more information.
10. You are now ready to work.

HOSE & EQUIPMENT CONNECTION DIAGRAMS

DIAGRAM A (CHARGE)


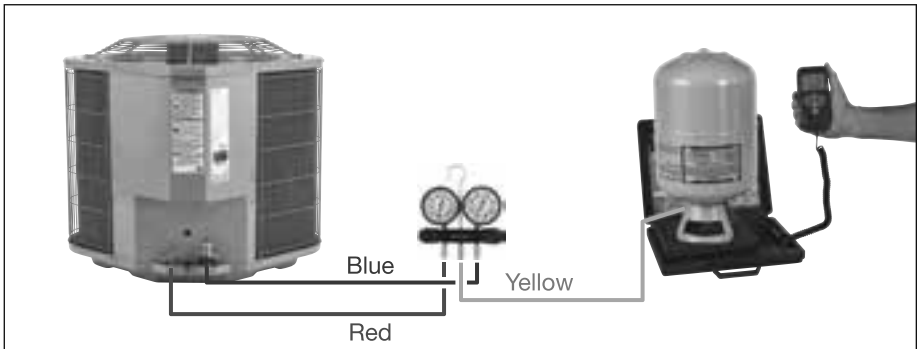


DIAGRAM B (RECOVER)



SCREEN LAYOUTS (Using CPS Link App On Mobile Device)

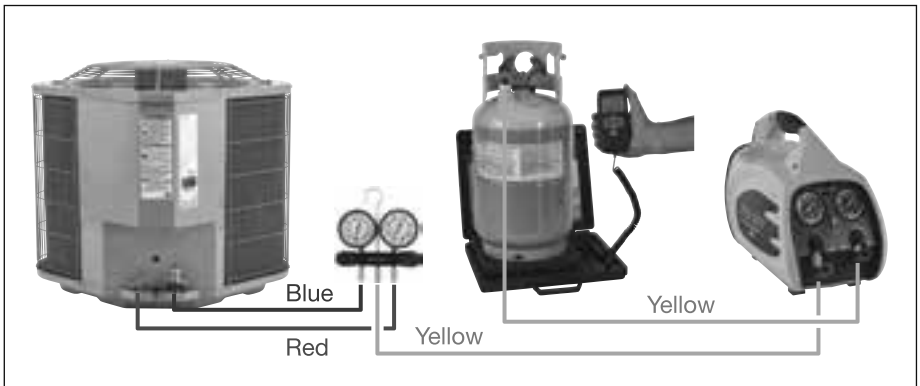

The **HOME SCREEN** (below) appears if the CPS Link™ app is paired to a scale you have selected from the device list (page 10).

Performance Screen (shown)

Menu Screen

Mode
Charge
Recover
Tank Tracker

I.D #
for CPS connected scale

Scale battery level
(% remaining)

Settings Screen
Language
Units
Geographic Tagging
Refrigerants
Alarms
Resolution

Platform Weight Format
Full screen vs. reduced screen

Device List
Search for and activate other CPS wireless devices

Snapshot
To save a screenshot of current readings to your job report


Weight On Platform
User-selectable units

Mode
Charge, Recover, Tank Tracker or Tare

Tools
To access My Customers, My Jobs, Tank Tracker


Job Info
(or to access previous Test logs)

SETTINGS SCREEN (Using CPS Link App On Mobile Device)

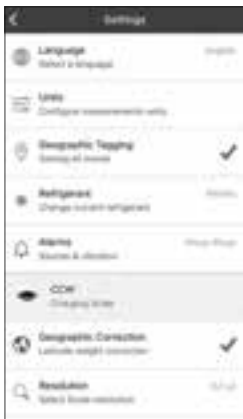

← **Global Settings (Language, Units, Etc)**
Selection will apply to all CPS wireless devices used.

Specific Device Settings →
Select settings that apply to a specific CPS wireless device.

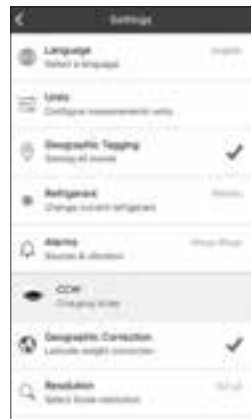

JOB INFO & TEST LOG SCREEN (Using CPS Link App On Mobile Device)



← **Job Info** - Input or access work orders, invoices, customers.

← **Tests Log** - Access results and data from previously completed jobs.

Job Screen

TOOLS SCREEN (Using CPS Link App On Mobile Device)



← **My Customers** - Add or change customer information.





← **My Jobs** - Access information from previous jobs.

← **Tank Tracker** - Manage data related to your inventory of refrigerant tanks.

← **Data Logging** - Access data logged by *other* CPS wireless products.



Follow on screen instructions

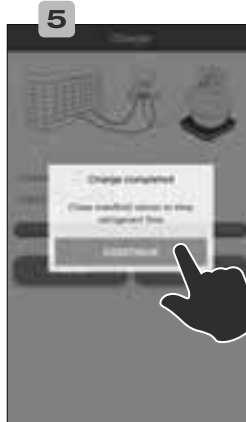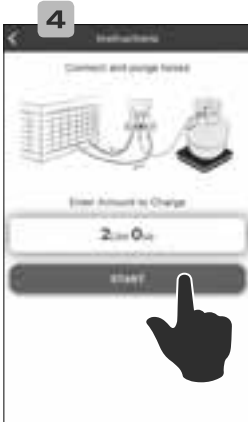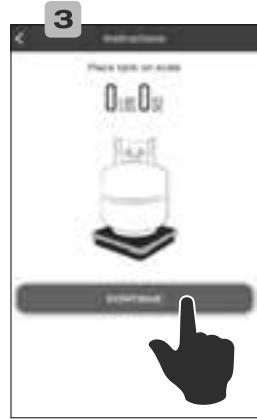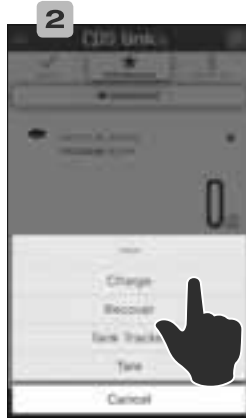

CLOSE manifold valves after programmed charge completed

Final tank weight (once CHARGE completed)




Exit app when done

Note:

1. Not all screens in the CHARGE sequence are shown above.
2. This operation can also be performed using the scale with corded control/display. See page 6.
3. If mobile device loses connection with CC220EW, charge numerical information can still be viewed on the scale's corded control. (See page 6).




Follow on screen instructions

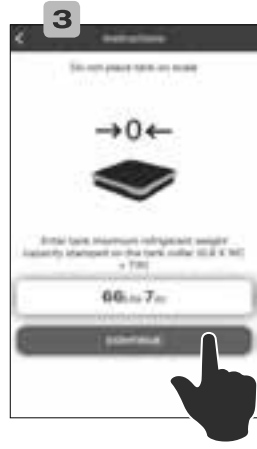

OPEN manifold valves

RECOVER in process

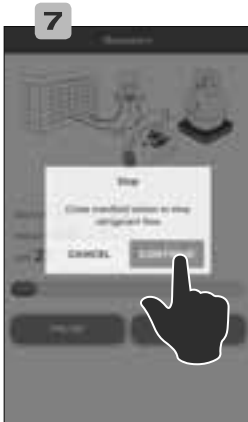


CLOSE manifold valves after desired amount recovered

Exit app when done

Note:

1. Not all screens in the RECOVER sequence are shown above.
2. This operation can also be performed using the scale with corded control/ display (See page 7-8).
3. If mobile device loses connection with CC220EW, recover numerical information can still be viewed on the scale's corded control (See page 7-8).

TANK TRACKER™ (Featured Within The CPS Link App)



The Tank Tracker™ feature (Patent Pending), developed by CPS Products, Inc., provides a convenient way to manage and track your inventory of refrigerant supply and recovery tanks in the field.

Tank Tracker™ is included within the CPS Link app (U.S. Patent # 9,043,061), and it allows technicians to set up an electronic inventory of all their Supply and Recovery Tanks. Information such as tank size, type and amount of refrigerant contained in each can be entered.

Tank Tracker™ will then record the addition or subtraction of refrigerant from a tank, along with the date, place and time the tank was used, as well as the name of the job and the customer it was used for. All of this information can be mailed to clients, technicians, a home office, or others.


The Tank Tracker™ feature is available only when the CPS Link app has been activated and the CC220EW scale has been paired with a mobile device.



SETUP NEW SUPPLY TANK (Using Tank Tracker & CPS Link App)



Follow on screen instructions to use Tank Tracker

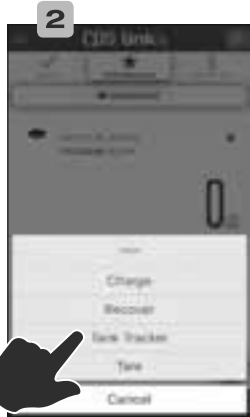


Enter SUPPLY TANK information (or select from drop downs)

SETUP NEW RECOVERY TANK (Using Tank Tracker & CPS Link App)





Follow on screen instructions to use Tank Tracker

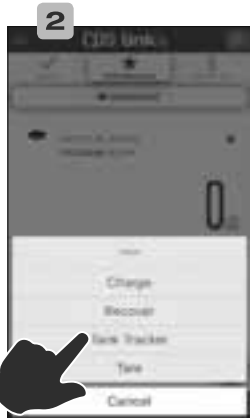

Enter RECOVERY TANK information (or select from drop downs)



Follow on screen instructions

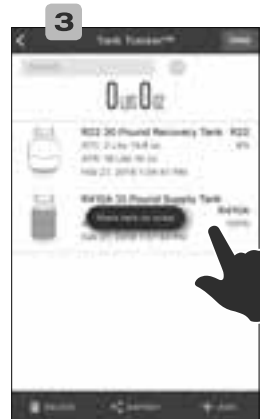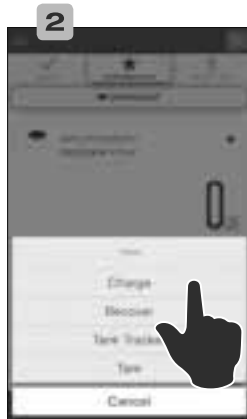

Place known SUPPLY TANK on scale and select its description



OPEN manifold valves




Final, updated tank weight (example) shown. Close valves.

Note:


1. Not all screens in the CHARGE sequence are shown above.
2. If mobile device loses connection with CC220EW, charge numerical information can still be viewed on the scale's corded control (See page 6).




Follow on screen instructions

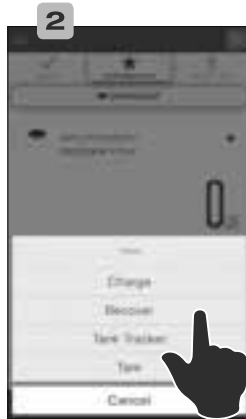

Place known RECOVERY TANK on scale and select its description

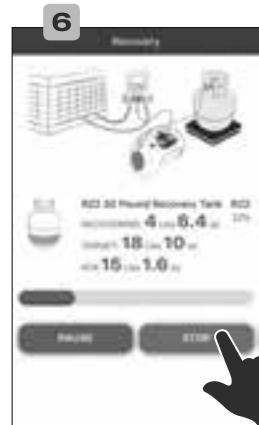

OPEN manifold valves

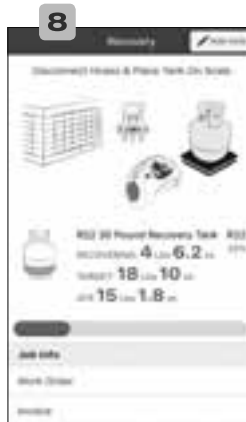

CLOSE manifold valves

Note:

1. Not all screens in the RECOVER sequence are shown above.
 2. If mobile device loses connection with CC220EW, recover numerical information can still be viewed on the scale's corded control (See page 7-8).

AUTOMATIC OPERATION (SVW, Scale, CPS Link App)



The CC220EW may also be operated in a fully Automatic Mode in either of two methods:

- A.** Pair the CC220EW scale to the CPS Wireless Solenoid Valve (“SVW”-purchased separately). Refrigerant tank weights are then read on the hand control display, or;
- B.** Pair the CC220EW scale to the SVW (purchased separately) and a mobile device. Tank weights are read on the hand control display or mobile device simultaneously.

Charge: In AUTOMATIC mode, the scale will monitor a tank’s weight and communicate with the SVW to automatically open/close for precise metering of a refrigerant charge that is programmed by a technician.

Recover: A CC220EW working in conjunction with an SVW can also be used to shut off a recovery procedure when accurate tank weight/capacity information has been input by the technician beforehand.

Note: In both charge and recovery procedures, technicians must still turn manifold and/or tank valves On/Off at the very beginning or very end of a charge or recover procedure.

See the SVW Solenoid Valve Owner’s Manual for further information about its use and operation.

APPENDIX A (SCALE BATTERY LEVEL, CONNECTIVITY)

Scale Battery Level:

When the scale and mobile device wirelessly connect, the scale’s battery usage is displayed as segments on the hand held LCD display (See Appendix B below), or the app HOME screen as a “% voltage remaining” graphic.

When To Replace Scale Batteries:

CPS recommends installing new 9V batteries if the battery reading falls below 7%, although useful operation can be obtained with battery voltages as low as 3%.

Low Battery Indication:






When a low battery condition exists, the scale will turn itself off in a safe condition.

Scale/Mobile Device Connection:

If the CC220EW has difficulty maintaining connectivity, no response to entries, etc., the most probable cause is a low battery, or your mobile device may be more than 150 ft. (45.7 m) [direct line of sight] from the scale.

APPENDIX B (LCD BATTERY LEVEL INDICATOR)

The battery indicator is shown on the LCD display as a battery shape with a 3 segment icon:

-  (3) segments on bar graph: Battery level higher than 66%
 -  (2) segments on bar graph: Battery level between 33% to 66%
 -  (1) segments on bar graph: Battery level between 10% to 33%
 -  (0) segments on bar graph: Battery level between 3% to 10%
 -  (0) segments on bar graph, blinking: Battery level below 3%
- LO CELL displayed on LCD: Battery depleted, powering down

APPENDIX C (DECLARATION OF CONFORMITY) In accordance with EN 45014

EN 61326:2013	Electrical Equipment for Measurement, Control and Laboratory Use – EMC Requirements
214 EN 55011	Industrial, Scientific & Medical, Class A Emissions Testing
303 EN 61000-4-2	Electrostatic Discharge, Immunity Testing
304 EN 61000-4-3	Radiated Electromagnetic Fields, Immunity Testing

APPENDIX D (CERTIFICATE OF CALIBRATION COMPLIANCE)

The CC220EW scale has been calibrated to respond to the published minimum accuracy levels using one of the following NIST traceable standards:

- Class F 50 lb weight S/N's TP3060, 7816, OJOH
- Class F 100 lb weight S/N's 2390, 1QNZ

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules and Industry Canada ICES-003. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAN ICES-3 (A)/NMB-3(A)

WARRANTY

CPS Products, Inc. guarantees that all products are free of manufacturing and material defects to the original owner for one year from the date of purchase. If the equipment should fail during the guarantee period it will be repaired or replaced (at our option) at no charge. This guarantee does not apply to equipment that has been altered, misused or solely in need of field service maintenance. All repaired equipment will carry an independent 90 day warranty. This repair policy does not include equipment that is determined to be beyond economical repair.

CPS LOCATIONS

CPS Products, Inc. U.S.A.

1010 East 31st Street Hialeah, Florida 33013 USA

Tel: 305-687-4121, 1-800-277-3808

Fax: 305-687-3743

E-mail: info@cpsproducts.com

Website: www.cpsproducts.com

CPS Products N.V

Krijgsbaan 241, 2070 Zwijndrecht, Belgium

Tel: (323) 281 30 40 Fax: (323) 281 65 83

E-mail: info@cpsproducts.be

CPS Products Canada Ltd.

1324 Blundell Road Mississauga, ON, L4Y 1M5

Tel: 905.615.8620, Fax: 905.615.9745

E-mail: info@cpsproducts.com

Website: www.cpsproducts.com

CPS Australia PTY. LTD.

109 Welland Avenue Welland, South Australia 5007

Tel: +61 8 8340 7055, Fax: +61 8 8340 7033

E-mail: sales@cpsaustralia.com.au

For latest update to this owner's manual, go to www.cpsproducts.com



cps[®]

www.cpsproducts.com



Authorized Distributor
APL ASIA CO., LTD.

11/129-132 Moo.5 Lamlukka Rd.,T.Kookut, A.Lamlukka, Pathumthani 12130 Thailand.
TEL. 0-2995-4461-3, FAX. 0-2995-4464

www.apl-asia.com

EMAIL : sales@apl-asia.com

LINE@ : @APL-ASIA